
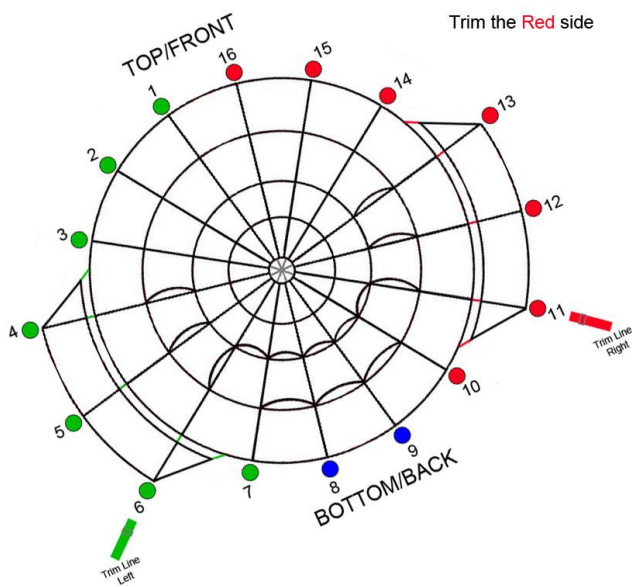


## SPORTLITE TRIMMING INSTRUCTIONS

If your parasail is flying to one side, we call this a "Bias", using our trimming system you can correct it. This is normal and due to the parasail stretching.


The Trim system is the **Green** and **Red** webbing coming from the bottom of the stabilisers/ears (see dots 6 & 11).

To trim your parasail you will need to adjust ONE of the trims, between approx. 7.5cm (3") and 15cm (6") should be enough.

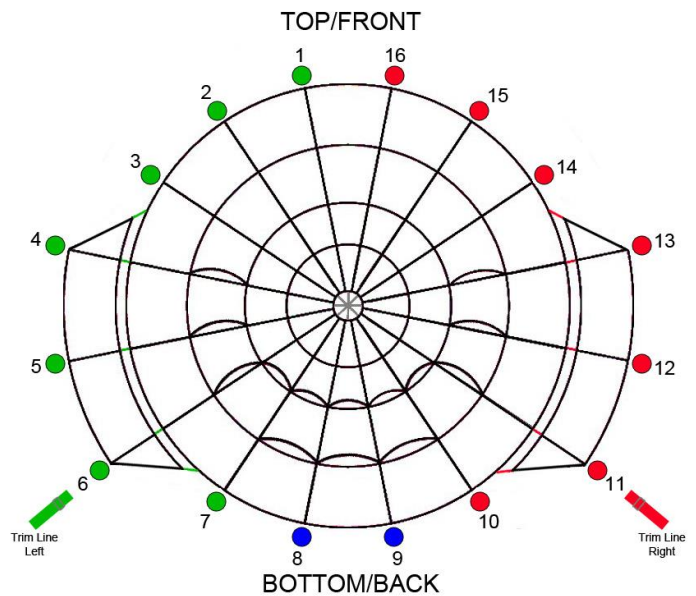

Left Bias

If your parasail flies as above you will need to adjust the **Red** trim ONLY.  
Test fly after trimming

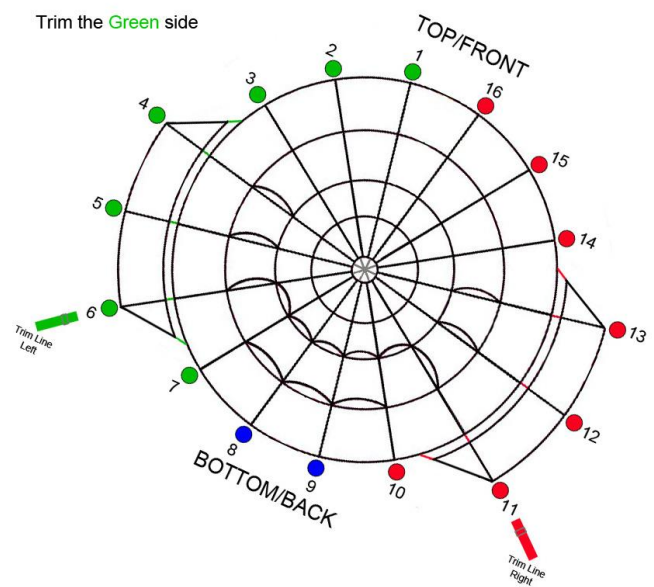

Right Bias

If your parasail flies as above you will need to adjust the **Green** trim ONLY.  
Test fly after trimming

If you experience any further problems or you are in any doubt with your Sportlite parasail then do not hesitate to contact us immediately on:

Tel: +44(0)1322 412715

Email: [brian@sportlite.co.uk](mailto:brian@sportlite.co.uk)